
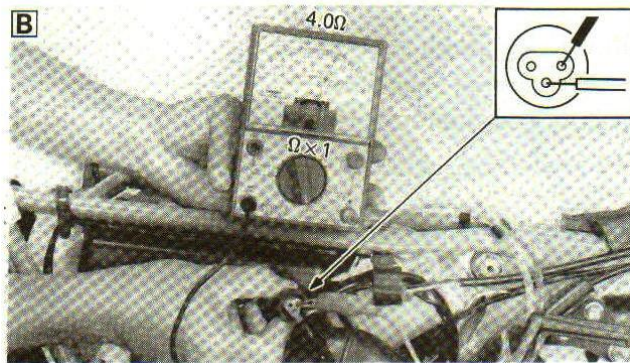
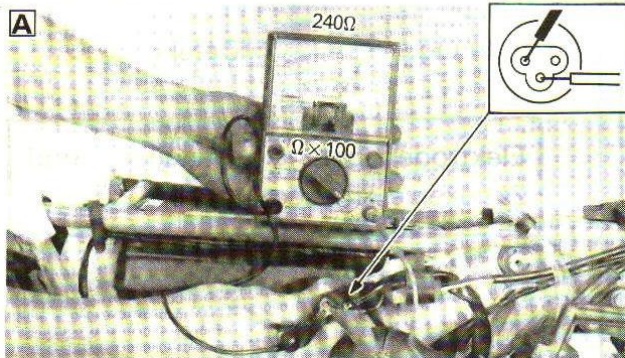


3 Engine stop switch

Disconnect the Black/White lead ① of engine stop switch at CDI unit.

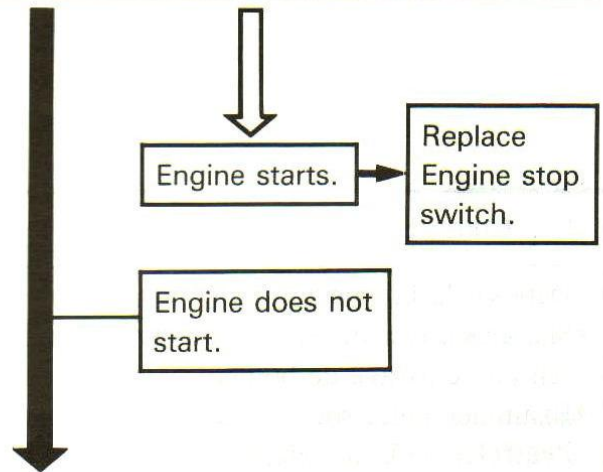

4 CDI Magneto (Source coil, Pickup coil) test

Disconnect the magneto leads, and use the pocket tester to check the resistance of the source coil **A** and/or pickup coil **B**.



**Source Coil Resistance:**  
 Brown-Black:  $240\Omega \pm 10\%$   
**Pickup Coil Resistance:**  
 White/Red-Black:  $4.0\Omega \pm 10\%$

